

CHIMNEY PROBLEMS SOLVED.. IN A FLASH!

UNIFLASH®

COMPLETE CHIMNEY FLASHING SYSTEM

- Patent No. 5,381,632
- Cuts labor time by 50%
- Available in five standard colors: Weathered Wood/Terratone, Brown, Black, White and Mill.
- Flashes 90% of all single flue chimneys in the U.S.A. Galvanized or Copper Kits available by special order.



completed
installation with
cutaway shown



**NEW
COLOR**

Weathered Wood
Terratone

Copper

Black

Mill

White

Brown

EACH KIT CONTAINS

One 32" Base Flashing

One 32" Cricket Flashing

Four 32" Counter Flashings

12 Step Flashings

Complete Instructions


MOHECO
PRODUCTS CO.
1-888-814-3721

26835 W. Seven Mile Rd., Redford, MI 48240
(313) 531-5630 • Fax (313) 531-0480
www.flashingkits.com www.moheco.com


- 1 kit will flash most single-flue chimneys.
- Fits roof pitches from 3/12 to 16/12.
- For new construction and reconstruction.
- Designed by professional roofers.
- Patent number 5,381,632.

Before getting started: Understanding how flashing and counter flashing work will help you better to complete the installation steps below. Most chimneys are built on a separate foundation than the dwelling and need to have flashings that can move independently without breaking the water-tight seal with the roofing material. Therefore, Part I shows flashings used to tie in with the shingles and are fastened to the roof only (leaving the upper portions free standing). Part II shows counter flashings as used to guide rain, ice & snow over the flashings and down the roof. These flashings are fastened to the chimney only leaving the bottom portion free standing. Take a moment and read over these instructions for a better understanding of the overall project.


Installation Instructions Part I, Flashings.

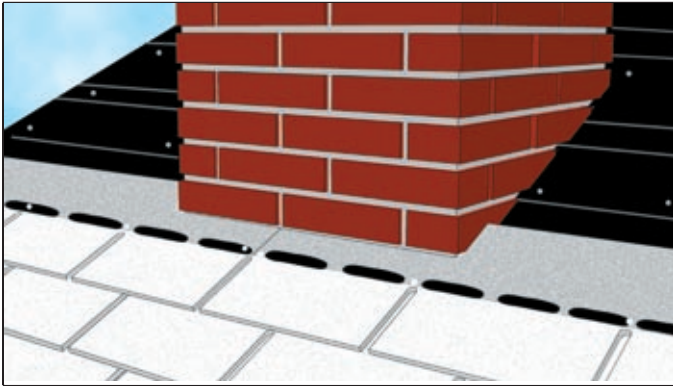


1 Shingle up to and across the base of the chimney to a point where the shingle tar-line is within at least 4 inches. Notch out shingles if need be. Note: Remember, once you clear the chimney, the shingles will have to meet back up as if the chimney was not even there.

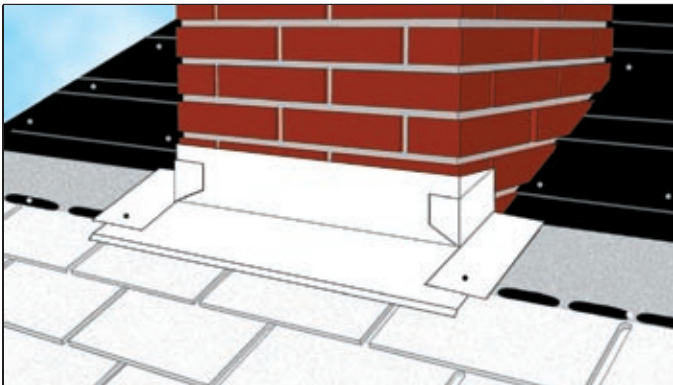


3 Remove notch from step flashing and bend tab around to front of chimney. Note: Step flashings are generally used to terminate a course of shingles at a wall, chimney or dormer and usually start at, or near the tar-line going up. Next, nail step flashing to the roof only and at a point where the nail head will again be covered by the next shingle.

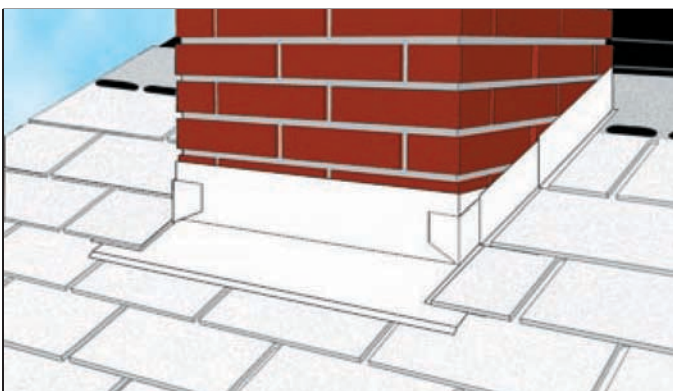


5 Continue installing step flashings and shingles on both sides of chimney until shingle clears the back. Ensure shingle course meets back up with the shingle on opposite side. Note: When nailing shingles in place, a general rule is to place the nail about 1 inch above the water slot. This helps prevent nail head exposure to the weather.

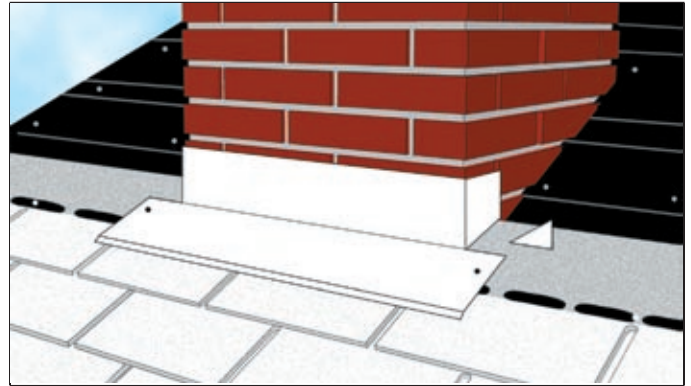

2 Center base flashing across chimney allowing 3 to 4 inches to extend past either end as shown. Remove notch from both ends and bend tabs around to sides of chimney. Nail base flashing in place ensuring nail heads will be covered by the next course of shingles.

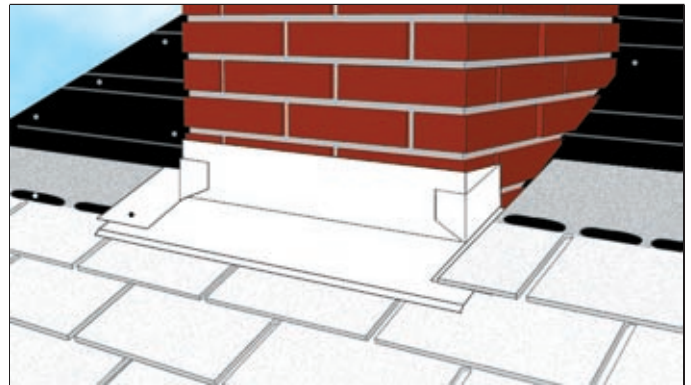


4 Notch and install step flashing on opposite side of chimney and nail in place. Cut shingle to fit over step flashings leaving approximately a 1/4" to 1/2" gap from the chimney for water drainage. Shingles installed on the opposite side of chimney should be cut so as to maintain the water slot patterns. Again, once you clear the back of the chimney, the shingle courses must come together again as if the chimney never existed.

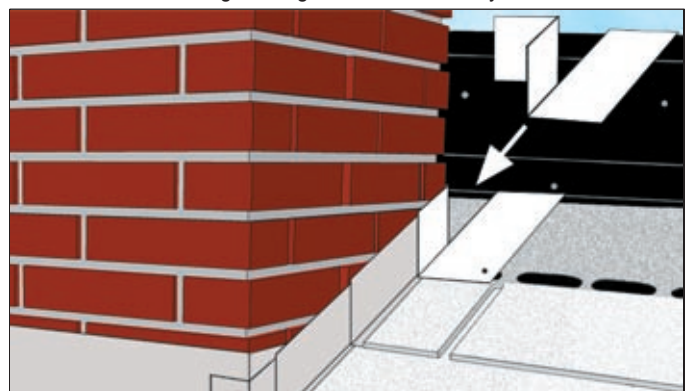

6 Cut and bend the last step flashing on both sides of the chimney and fit into place. For extra protection, this component can be set in roof cement before nailing in place (ensure cement will not be visible).


UniFlash® Installation Instructions (cont.)

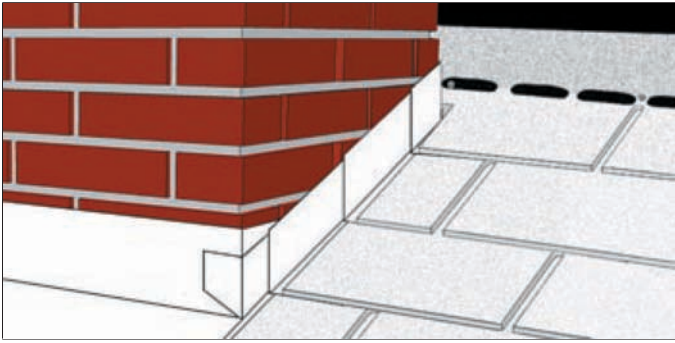

7 Cut shingle around the back of the chimney. This cut can be snug with little, or no gap.



8 Finish installing shingle course across the back of the chimney and meet up with shingles on opposite side. Nail in place.

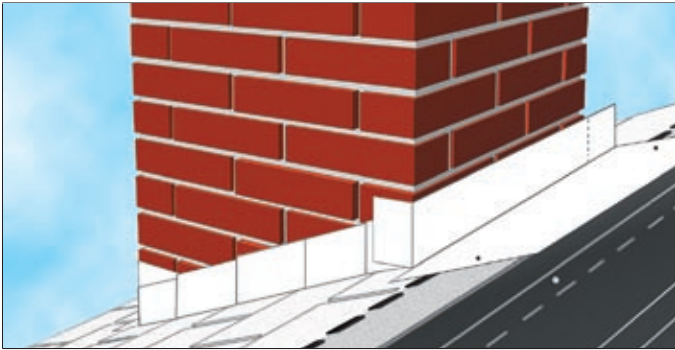


9 Center cricket flashing along back of chimney allowing the ends to extend past each corner 3 to 4" and mark. Cut both ends up to your mark (dotted line), and bend tabs around to the sides. Nail in place to roof only.




10 Complete the installation of shingles. Check your work thoroughly now and ensure there are no gaps or openings where ice & water can seep in.


Part II, Counter Flashings. Counter flashings divert water over and away from the roof flashings and are only fastened to the masonry.

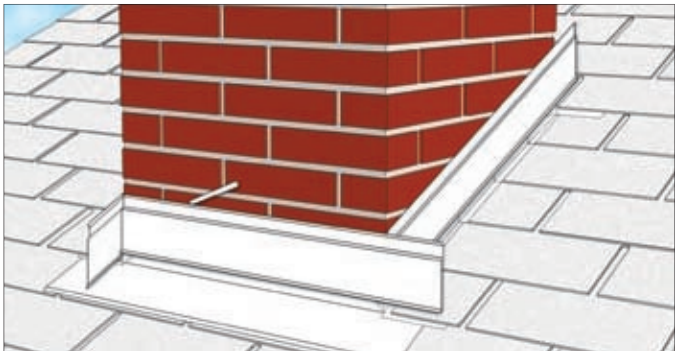


11 For best appearance, install your counter flashing with the tops aligned all the way around the chimney. Starting with both sides, use a soap stone or chalk and mark along the tops leaving a slight gap at shingles for drainage. Align the top of the front and back counterflashings with the tops of the side counterflashings and mark. Set counter flashings aside for now and proceed to step 12.

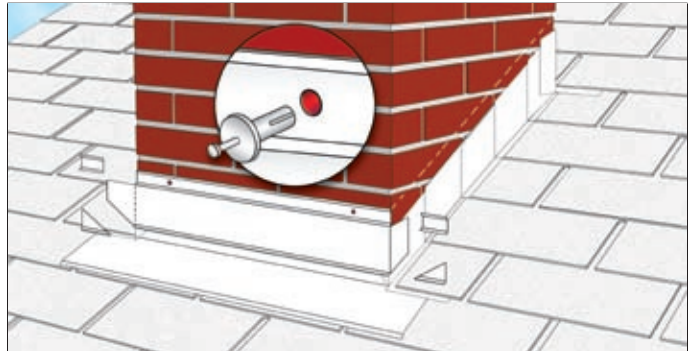

12 Notch out counter flashing ends as shown and bend around to the sides of chimney. For best results, cut top portions flush with chimney corners then bend tabs around to sides. This will help prevent the metal from warping when bent. Install masonry fasteners through counter flashing and into chimney. Ensure metal is tight against brick.

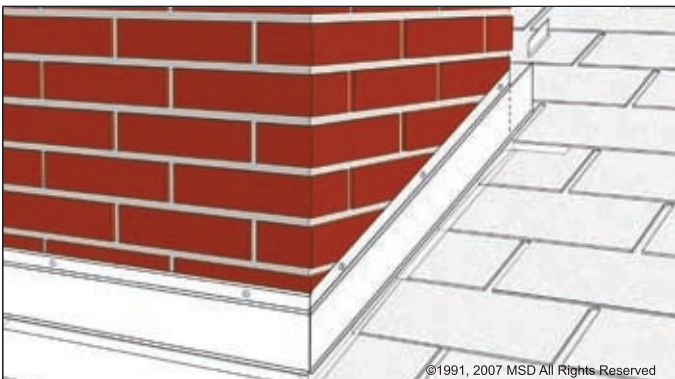

13 Place side counter flashings along your mark and cut flush with the front counter flashing. Notch out the rear corner as shown and bend tabs around to the back. Insert 2 to 3 more masonry fasteners. Note: Side counter flashings may appear to be wider as they are cut on an angle. For best appearance, keep tops aligned.

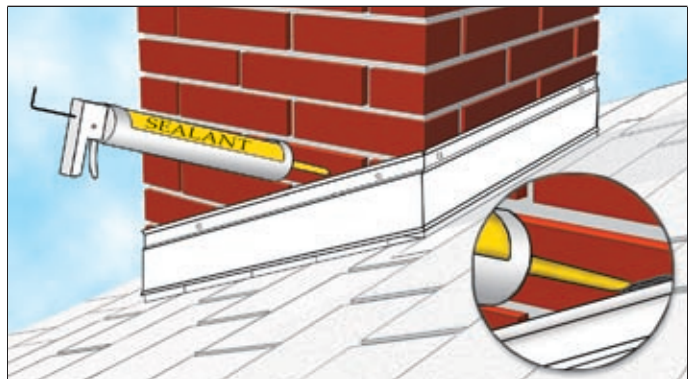

14 Mark rear counter flashing even with chimney corners and place along your mark. Install masonry fasteners. Check the tops of all 4 counter flashings to ensure the presence of a "V" notch. As seen in the detail, caulk all 4 counter flashings along the V and at the corners. Ensure there are no gaps, bubbles or air pockets for water to seep into.